


41-PANIC STATUS LIGHT REFERENCE GUIDE

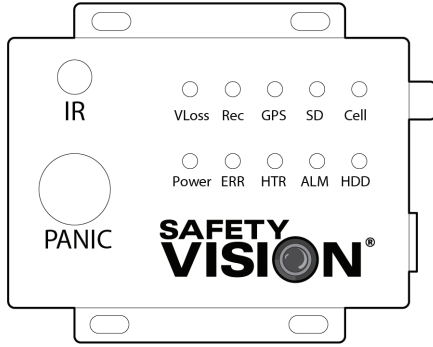

| STATUS LEDS | DESCRIPTION |
|-------------|--|
| HDD | Flashes when HDD is being accessed |
| SD | Flashes when SD card is being accessed |
| GPS | Solid - GPS searching for signal Flashing - GPS has locked on |
| NET | HVR is connected to a network |
| HTR | Internal heater is active |
| Power | HVR is receiving power |
| REC | HVR is recording video |
| VLoss | One or more cameras is detached or malfunctioning |
| ALM | Event/alarm has occurred |
| ERR | Storage Error - corrupted driver or unformatted drive |